


INSTALLATION OF ADA DOOR CONVERSION PARTS

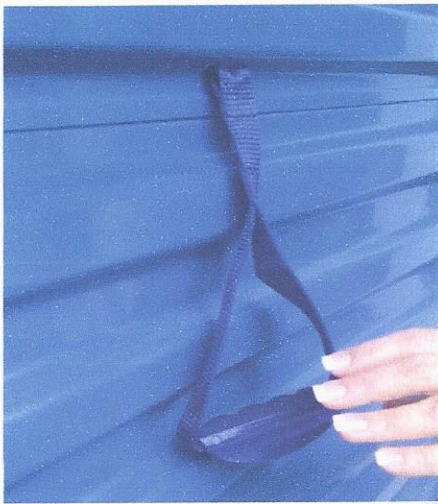

C-ADA-OP



PARTS LIST:

C-ADA-OP ADA Open Nylon Cord & Loop Handle with rope fastener

C-ADA-CL ADA Close Nylon Cord & Loop Handle with rope fastener

TOOLS REQUIRED:

- Drill
- 1/4" Drill bit

INSTALLATION INSTRUCTIONS FOR C-ADA-OP (OPEN HANDLE):

- 1) Make sure door is closed
- 2) Mark location of drill holes
 - Approx. 10" from side of door latch
 - 24" from the floor
 - (Bottom of installed handle to hang **no lower than 15" from floor**)
 - Mark (2) holes side by side 1 1/8" apart on the high rib of door.
 - Drill (2) holes with 1/4" drill bit (sold separately)
- 3) Feed each end of black rope on handle through the drilled holes.
- 4) Open door, go inside unit and tightly knot the ends of the black rope to fasten the handle.

INSTALLATION INSTRUCTIONS FOR C-ADA-CL (CLOSE HANDLE):

- 1) Open door, enter unit and keep bottom of door positioned within reach
- 2) Thread the black rope end of the handle into the plate frame at the bottom of the door through available hole and knot tightly to fasten.

When the door is open, the loop handle at the end of the long strap hangs **no lower than 40"- 48" off the floor.**



C-ADA-CL

